



ČERVINKA
CZECH REPUBLIC S.R.O.








PRODUCER AND DISTRIBUTOR
FIRE EXTINGUISHER AND FIRE EQUIPMENT





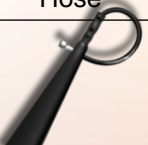 

CATALOGUE

OF SPARE PARTS











www.cervinkafire.com








PORTABLE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Streamline	ND4001	P1 Če
	ND3001	P2 Če
	SPP2-01	P2 BETA-L
 Metal streamline	SPP1-01Z	P1 BETA-Z
 Nozzle	ND6001	S2 Če
	SPCO22-01	CO2 BETA-S
 Hose	ND2001	P4 Če
	ND1001	P6 Če / P6 Če 2
	ND11001	P9 Če
 Hose	ND12001	P12 Če
 Hose with magnet	SPP6Z-01	P6 BETA-Z / P6 BETA-ZH
 Hose	ND8001	Pe6 Če
	SPF6-01	F6 BETA-W







Spare Part	Code	For FE
 Hose	ND7001	Pe9 Če
	SPF9-01	F9 BETA-W
	ND9001	V9 Če
 Hose	SPW9-01	V9 KT
 Hose	0026 (ND5001)	S5 Če
 Hose	0026B (ND5001B)	S5 Če (89B)
 Hose	SPCO25-06	K5 BETA-Z
 Manometer	ND4002	P1 Če
	ND3002	P2 Če
	ND2002	P4 Če
	ND1003	P6 Če / P6 Če 2
	ND11002	P9 Če
	ND12002	P12 Če








PORTABLE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Manometer	SPP1-02Z	P1 BETA-Z
	SPP2-02	P2 BETA-L
	SPP6Z-02	P6 BETA-Z / P6 BETA-ZH
 Manometer	SPF6-03	F6 BETA-W
	SPF9-03	F9 BETA-W
	ND9003	V9 Če
 Manometer	SPW9-02	V9 KT
 Manometer	ND8003	Pe6 Če
	ND7003	Pe9 Če
 Valve	SPP1-03Z	P1 BETA-Z (metal streamline is not included)
 Valve	ND4003	P1 Če
	ND3003	P2 Če
 Valve	SPP2-03	P2 BETA-L
 Valve	ND2003	P4 Če
	ND1004A	P6 Če / P6 Če 2
	ND11003	P9 Če
 Valve	SPP6Z-03	P6 BETA-Z / P6 BETA-ZH
 Valve	ND12003	P12 Če
	SPF6-09	F6 BETA-W
	SPF9-09	F9 BETA-W
	ND9004	V9 Če

Spare Part	Code	For FE
 Valve	SPW9-04	V9 KT
 Valve	ND8004	Pe6 Če
	ND7004	Pe9 Če
 Valve	ND6004	S2 Če
 Valve	SPCO22-04	CO2 BETA-S
 Valve	ND5004	S5 Če
 Valve	SPCO25-04	K5 BETA-Z
 Sealing under manometer	ND4004	P1 Če
	SPP1-04Z	P1 BETA-Z
	ND3004	P2 Če
	SPP2-04	P2 BETA-L
	ND2004	P4 Če
	ND1005	P6 Če / P6 Če 2
	SPP6Z-04	P6 BETA-Z / P6 BETA-ZH
	ND11004	P9 Če
	ND12004	P12 Če
	ND8005	Pe6 Če
	SPF6-04	F6 BETA-W
	ND7005	Pe9 Če
	SPF9-04	F9 BETA-W
	ND9005	V9 Če






PORTABLE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Sealing under manometer	SPW9-05	V9 KT
	ND4005	P1 Če
	SPP1-05Z	P1 BETA-Z
	ND3005	P2 Če
	SPP2-05	P2 BETA-L
	ND2005	P4 Če
	ND1006	P6 Če / P6 Če 2
	ND11005	P9 Če
ND12005	P12 Če	
 Sealing under valve	SPP6Z-05	P6 BETA-Z / P6 BETA-ZH
	ND8006	Pe6 Če
	SPF6-05	F6 BETA-W
	ND7006	Pe9 Če
	SPF9-05	F9 BETA-W
ND9006	V9 Če	
 Sealing under valve	SPW9-06	V9 KT
	ND2006	P4 Če
	ND1007	P6 Če / P6 Če 2
	SPP6Z-06	P6 BETA-Z / P6 BETA-ZH
	ND11006	P9 Če
	ND12006	P12 Če
	ND8007	Pe6 Če
	SPF6-06	F6 BETA-W
	ND7007	Pe9 Če
	SPF9-06	F9 BETA-W
	ND9007	V9 Če






Spare Part	Code	For FE
 Sealing for hose	ND5002	S5 Če
	SPCO25-02	K5 BETA-Z
 Sealing under nozzle	ND6002	S2 Če
	SPCO22-02	CO2 BETA-S
 Safety diaphragm of valve	ND6003	S2 Če
	SPCO22-03	CO2 BETA-S
	ND5003	S5 Če
 Reduction for valve (from G3/4" to W21,8x1/14")	SPCO25-03	K5 BETA-Z
	SPCO2-12	S2 Če
		CO2 BETA-S
		S5 Če
K5 BETA-Z		
 Hook on hose	ND2007	P4 Če
	ND1008	P6 Če / P6 Če 2
	ND11007	P9 Če
 Tyre valve	ND4006	P1 Če
	SPP1-06Z	P1 BETA-Z
	ND3006	P2 Če
	SPP2-06	P2 BETA-L
	ND2008	P4 Če
	ND1009	P6 Če / P6 Če 2
	SPP6Z-07	P6 BETA-Z / P6 BETA-ZH
	ND11008	P9 Če
	ND12008	P12 Če
	 Tyre valve	ND8008
SPF6-07		F6 BETA-W
ND7008		Pe9 Če
SPF9-07		F9 BETA-W
ND9008		V9 Če



PORTABLE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Type label	ND4007	P1 Če
Type label	SPP1-07Z	P1 BETA-Z
Type label	ND3007	P2 Če
Type label	SPP2-07	P2 BETA-L
Type label	ND2009	P4 Če
Type label	ND1010	P6 Če 34A/183B/C (0005C) CE0036
Type label	ND1010A	P6 Če A (0005B) CE0062
Type label	ND1010B	P6 Če 21A/113B/C (0004)
Type label	ND1010C	P6 Če 2 (0213)
Type label	SPP6Z-08	P6 BETA-Z / P6 BETA-ZH
Type label	ND11009	P9 Če
Type label	ND12009	P12 Če
Type label	ND8009	Pe6 Če
Type label	SPF6-08	F6 BETA-W
Type label	ND7009	Pe9 Če
Type label	SPF9-08	F9 BETA-W
Type label	ND9009	V9 Če
Type label	SPW9-09	V9 KT
Type label	ND6007	S2 Če (21B)
Type label	ND6007B	S2 Če (34B)
Type label	SPCO22-09	CO2 BETA-S
Type label	ND5007	S5 Če (70B)
Type label	ND5007B	S5 Če (89B)
Type label	SPCO25-09	K5 BETA-Z

Spare Part	Code	For FE	
 Safety pin under valve	SPP1-08Z	P1 BETA-Z	
 Safety pin under valve	ND4008	P1 Če	
	ND3008	P2 Če	
	SPP2-08	P2 BETA-L	
	ND2010	P4 Če	
	ND1011	P6 Če / P6 Če 2	
	SPP6Z-09	P6 BETA-Z / P6 BETA-ZH	
	ND11010	P9 Če	
	ND12010	P12 Če	
	ND8010	Pe6 Če	
	SPF6-10	F6 BETA-W	
	ND7010	Pe9 Če	
	SPF9-10	F9 BETA-W	
	ND9010	V9 Če	
	ND6005	S2 Če	
	SPCO22-07	CO2 BETA-S	
	ND5005	S5 Če	
	SPCO25-07	K5 BETA-Z	
	 Sleeve	0030A	S2 Če
	 Sleeve	SPCO22-05	CO2 BETA-S
0030B		S5 Če	
 Sleeve	SPCO25-05	K5 BETA-Z	
	0030C	P6 Če / P6 Če 2	









PORTABLE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Holder	ND4009	P1 Če
	SPP1-09Z	P1 BETA-Z
 Holder	ND3009	P2 Če
	SPP2-09	P2 BETA-L
 Holder with sleeve	0091	P1 Če
		P1 BETA-Z
 Holder with 2 sleeves	0092B	P2 Če
		P2 BETA-L
 Delta holder	0018	P6 Če / P6 Če 2
	SPP6Z-12	P6 BETA-Z / P6 BETA-ZH
	ND12011	P12 Če
	ND8011	Pe6 Če
	SPF6-11	F6 BETA-W
	ND7011	Pe9 Če
	SPF9-11	F9 BETA-W
	ND9011	V9 Če
	0018	V9 KT
	0018	S2 Če
	SPCO22-11	CO2 BETA-S
	0018	S5 Če
	SPCO25-11	K5 BETA-Z







Spare Part	Code	For FE
 Standard holder	ND2011	P4 Če
	ND1012	P6 Če / P6 Če 2
	ND11011	P9 Če
 Holder	ND6008	S2 Če
	SPCO22-10	CO2 BETA-S
	ND5008	S5 Če
	SPCO25-10	K5 BETA-Z
 Plastic base	ND1002	P6 Če / P6 Če 2
 Plastic base	SPP6L-13	P6 BETA-Z / P6 BETA-ZH
 Plastic base	ND11012	P9 Če
 Plastic base	ND12012	P12 Če
 Plastic base	ND8002	Pe6 Če
	SPF6-02	F6 BETA-W
 Plastic base	SPF9-02	F9 BETA-W
	ND7002	Pe9 Če
	ND9002	V9 Če
 Hose magnet	ND1013	P4 Če
		P6 Če / P6 Če 2
		P9 Če







MOBILE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Nozzle	ND10001	P50 Če
 Nozzle	ND10001R	P50-R
 Nozzle	SPP50S-01	P50 BETA-S
 Nozzle	NDP10001R	Pe50-R
 Hose	ND10002	P50 Če
 Hose	ND10002R	P50-R
 Hose	SPP50S-02	P50 BETA-S
 Hose	NDP10002R	Pe50-R

Spare Part	Code	For FE
 Manometer	ND10010	P50 Če
 Manometer	ND10010R	P50-R
 Manometer	SPP50S-10	P50 BETA-S
 Manometer	NDP10010R	Pe50-R
 Valve	ND10003	P50 Če
 Valve	ND10003R	P50-R
 Valve	SPP50S-03	P50 BETA-S
 Valve	NDP10003R	Pe50-R

MOBILE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Sealing under manometer	ND10004	P50 Če
 Sealing under manometer	ND10004R	P50-R
 Sealing under manometer	SPP50S-04	P50 BETA-S
 Sealing under manometer	NDP10004R	Pe50-R
 Sealing under valve	ND10005	P50 Če
 Sealing under valve	ND10005R	P50-R

Spare Part	Code	For FE
 Sealing under valve	SPP50S-05	P50 BETA-S
 Sealing under valve	NDP10005R	Pe50-R
 Sealing for hose	ND10006	P50 Če
 Sealing for hose	ND10006R	P50-R
 Sealing for hose	SPP50S-06	P50 BETA-S
 Sealing for hose	NDP10006R	Pe50-R



 




MOBILE FIRE EXTINGUISHERS

Spare Part	Code	For FE
 Tyre valve	ND10007	P50 Če
 Tyre valve	ND10007R	P50-R
 Tyre valve	SPP50S-07	P50 BETA-S
 Tyre valve	NDP10007R	Pe50-R
 Type label	ND10008	P50 Če
Type label	ND10008R	P50-R
Type label	SPP50S-08	P50 BETA-S
Type label	NDP10008R	Pe50-R


 




Spare Part	Code	For FE
 Safety pin under valve	ND10009	P50 Če
 Safety pin under valve	ND10009R	P50-R
 Safety pin under valve	SPP50S-09	P50 BETA-S
 Safety pin under valve	NDP10009R	Pe50-R
 Wheels	ND10013	P50 Če
 Wheels	SPP50S-13	P50 BETA-S

HOSE REEL






FOR CODES: 0208, 0209, 0046AP, 0211, 0212




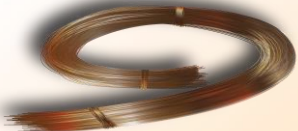 


Spare Part	Code
 Nozzle D19	H001
 Nozzle D25	H002
 Ball valve D19	0042b
 Ball valve D25	0042a
 Hose D19	0021
 Hose D25	0022
 Holder on the wall	0239

EXTINGUISHING AGENTS

Spare Part	Code
 HJ ABC Super Powder 40% (50 kg)	0000A
 MJ ABC Powder 40% (50 kg)	0000B
 Powder Class D (25 kg) for FE Class D (codes: 0132, 0133, 0134,0135)	0000C
 Carbonate of potash (40 kg) for water FE V9 KT (codes: 0008) -20°C +60°C	0222
 Foam AFFF (25 l) for FE (codes: 0116, 0117)	ND8012
 Antifreeze foam Premix Mg30 (25 l) For FE (codes: 0131, 0138, 0219)	ND8013

OTHER PRODUCTS

Spare Part	Code
 <p>Metal stamp</p>	SPK1007
 <p>Sealing pliers</p>	SPK1001
 <p>Punching pliers</p>	SPK1002
 <p>Control manometer</p>	SPK1005
 <p>Extension to control manometer</p>	SPK1006

Spare Part	Code
 <p>Seals (2000 Pcs)</p>	SPK1003
 <p>Seals (500 Pcs)</p>	SPK1008
 <p>Seals (100 Pcs)</p>	SPK1010
 <p>Sealing wire (500 g)</p>	SPK1004
 <p>Glass for box to keys</p>	SPK1009
 <p>Glass for box to fire extinguisher (90 x 100 mm) (codes: 0012P, 0012PB, 0014PU, 0014PBU)</p>	SPK1011



ČERVINKA
CZECH REPUBLIC S.R.O.

PRODUCER AND DISTRIBUTOR OF FIRE
EXTINGUISHERS AND FIRE EQUIPMENT

+420 572 570 961
info@hasicitechnika.com
www.cervinkafire.com

Illustrative pictures may be used. Printed errors reserved.